

ADEMCO (HONEYWELL) - Basic Most Commonly Used User Functions

Arming / Disarming the System

There are two MOST used ways of arming the system:

Stay Arming (For when you will be staying in the home – arms the doors and windows)

Enter your security code and press the "STAY" button.

To disarm enter your security code and press the "OFF" button.

Away Arming (For when no one will be in the home – arms doors, windows, motion detectors and other devices)

Enter your security code and press the "AWAY" button.

To disarm enter your security code and press the "OFF" button.

Access Codes (Changing / Adding & Deleting additional Users)

Enter your current Master Code then press "CODE" (8) button.

Enter the User Number (single digit – user 3 to 6).

Enter the desired 4 digit code for use by that user.

The Keypad will beep once, when the user code has been successfully entered.

For the Master Code enter user # 2

Enter the new desired Master Code Twice

The Keypad will beep three times.

Bypassing Zones (In Case a zone / device needs to be serviced)

Enter your security Code and Press "Bypass" button

Enter the Zone Number(s) to be Bypassed (e.g. 04, 06 etc)

The keypad will display a "Bypass" message for each bypassed zone number. Wait for the zones to be displayed

Arm the system Normally

Door Chime (Entry / Exit Beeps)

To turn Chime Mode ON: Enter your security Code and press the "CHIME" button.

To turn Chime Mode OFF: Enter your Security Code and press the "CHIME" button.

Testing Your System

(RECOMMENDED AT LEAST MONTHLY)

Call the Central Station to advise that you will be testing your alarm system (failure to call in advance may result in false alarms / dispatches)
YOUR PASSWORD WILL BE REQUIRED.

Arm you alarm system in AWAY mode (open and close the Entry / Exit Door as if you were leaving the premises)

Once the alarm system is fully armed, trigger every security device (open all contacted doors / windows, walk in front of all motion detectors etc.) THE ALARM SYSTEM WILL SOUND AND TRANSMIT SIGNALS TO CENTRAL STATION.

Once all devices have been triggered, DISARM the system.

Call back the central station to check that they have received signals from your alarm system. Once satisfied, ASK THE OPERATOR TO TAKE YOUR SYSTEM OFF TEST.